




Veneers

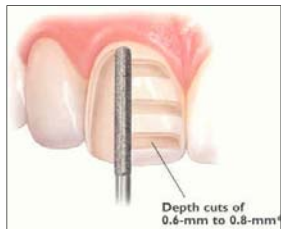

Uniform Facial Preparation
Use a medium grit, round-ended, diamond bur to remove a uniform thickness of facial enamel by joining the depth cut grooves.
Need .5 - .8 mm Chamfer Margin.

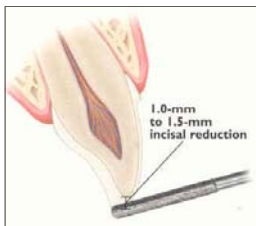


Incisal Preparation
Angle a diamond bur to bevel back the incisal edge

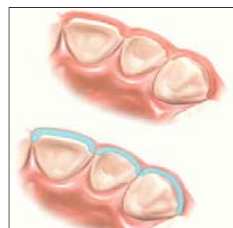


The correct preparation of the chamfer margins interproximally allows for the appropriate thickness of porcelain


Anterior Crowns

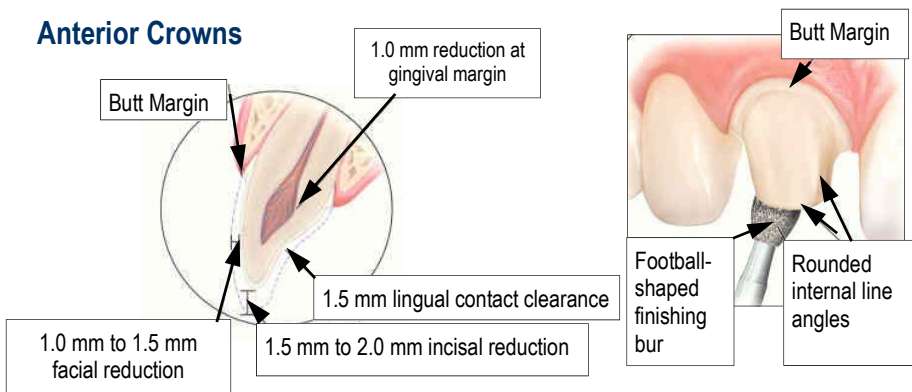

Inlay Preparation

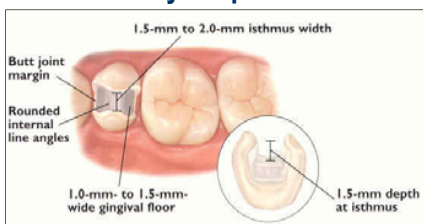

Onlay Preparation

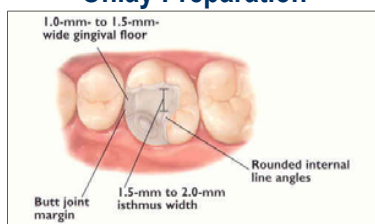

If you have any questions, call us

888-875-6011